

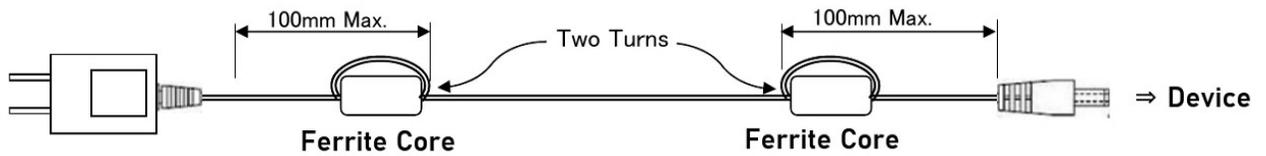


### Location of Installing Ferrite Core

Power Cable: Set up the ferrite core in two places within 100mm from the main body of the power adaptor, and within 100mm from the **Device**

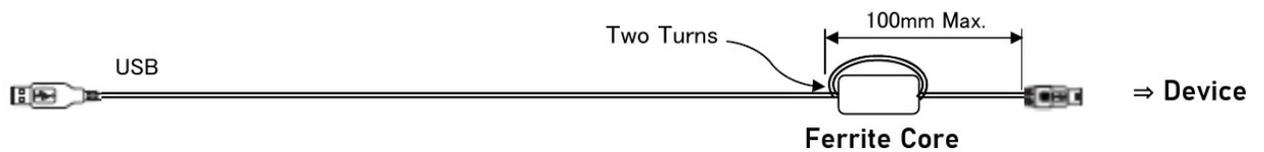


Communication Cable (RS-232C, USB): Set up the ferrite core within 100mm from the the **Device**

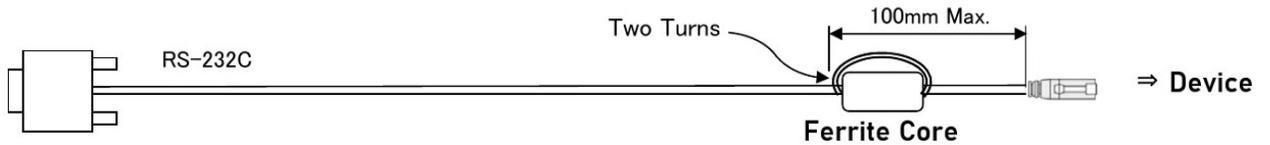

### Method of Installing Ferrite Core

The cable around the ferrite core once so that the ferrite core should not move. Close the ferrite core until you hear it click into place.

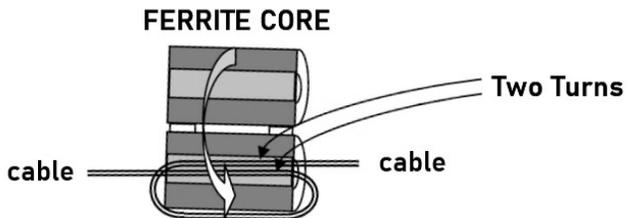

### PRACTICAL APPLICATIONS EXAMPLES:

